



## Sliding Gate Kit - ADF1401/R **List Of Inclusions**





**Galvanised Steel Gate Frame** 50mm x 1.2mm Galvanised Steel Custom made to your required size



Galvanised Steel Base Plate 50mm Galvanised Steel Includes pre-drilled motor mount and legs for easy installation





**NICE\* Electric Sliding Gate Motor** Includes NICE ROAD400KCE Sliding Gate Motor with 2 remote

control units, built in safety detection, plus, 4 x 1m gate racks



2 x 3.6m Track



1 x Post Cap



2 x Top roller and bracket



2 x Gate Rollers



Tek screws



**Hex Screws** 


## Installation Guide for Sliding Gate Kit - ADF1401/R






1 Lay out the garden base plate, 100mm from the fence and flush with the edge of the driveway opening. Mark the centre of each foot.


Remove the baseplate and excavate footings 300mm wide x 450mm deep.

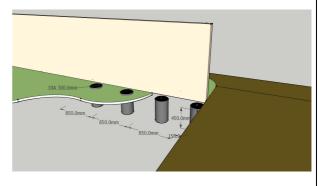

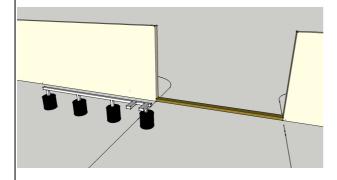


3 Install the baseplate so the top face is flush the top of the driveway slab.

Pack the baseplate into position but do not add the concrete yet

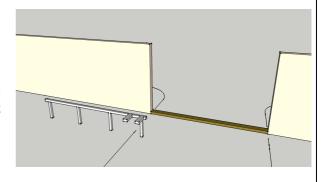


**5**Excavate and install the top roller support post (if required)

Screw the roller track to the top of the baseplate and concrete drive.

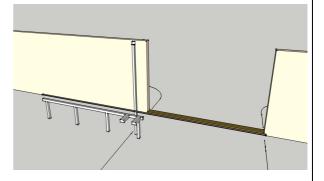

ALL DAY FENCING

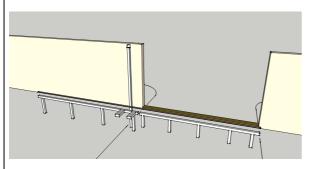


7

If your driveway is not concrete or a similar hard surface, you will require an optional driveway baseplate as shown.


8

Insert gate rollers into the bottom of the gate frame. Fix the rollers with the tek screws provided and mount the gate frame on the track.

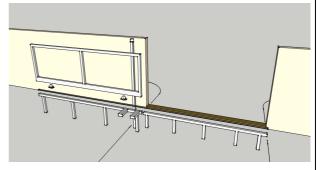


9

Install the top rollers and bracket.

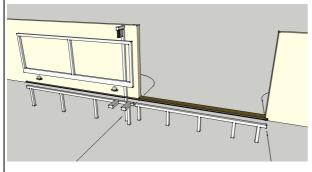


10

Install the gate motor rack to the rear of the gate frame.

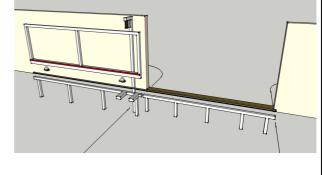

11


Install the motor to the arms protruding from the baseplate. Ensure the motor gear is in contact with the gate rack. Check operation then concrete footings.

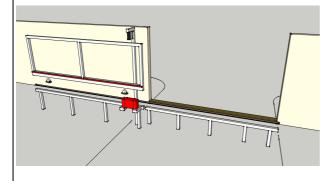

12

Fit the gate limiter stops to either end of the gate rack. The motor should be connected by a licensed electrician.

To set the gate opening and closing speeds please refer to the programming section in the user manual provided.

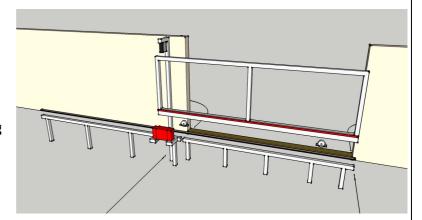

## ALL DAY FENCING