




1. Grab a bundle of around 15 to 20 sticks. Assemble them in a roll shape with the cut ends at one end. Wrap 2 wires about 400mm apart through the fence top and around the roll.

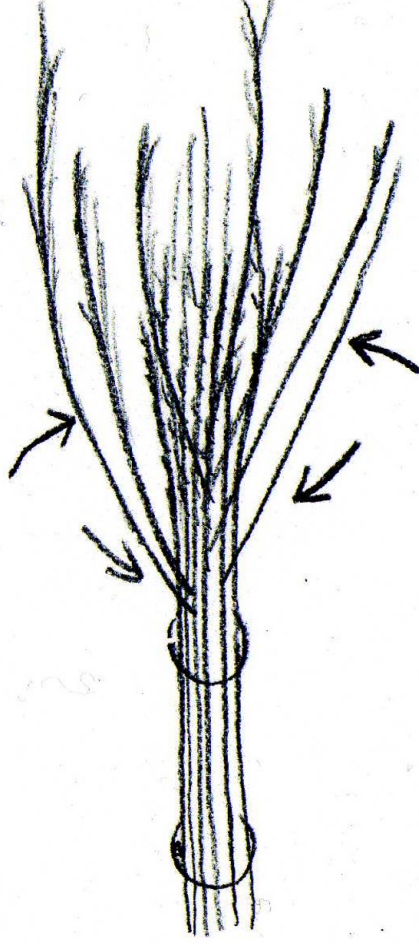

2. Using another 10 to 12 sticks, insert the cut end into the middle of the roll where it is hidden. Wrap the sticks around the green ends of the roll to hide the green ends. Secure with wire at 400mm centres

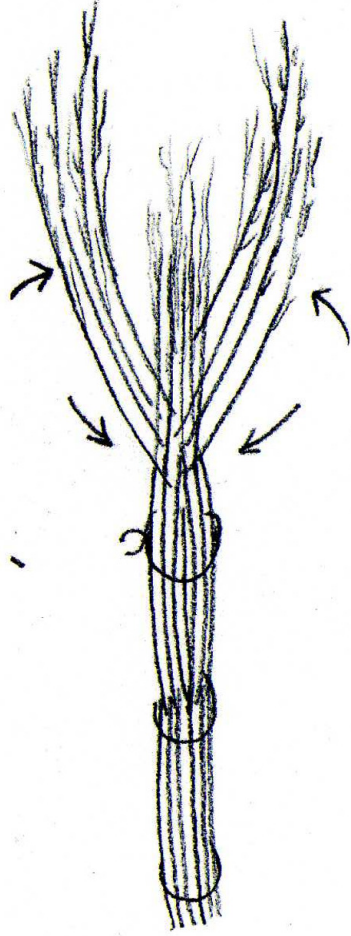

3. Repeat the above step until the desired length of capping has been completed.

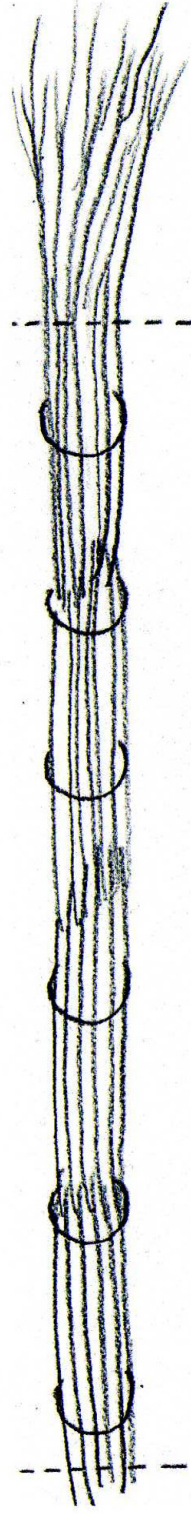

4. Once the desired length of capping has been done, trim both ends neatly with a hand-saw or hedge clippers. Tighten the wire bands and trim the excess wire ends.

Roll Top Cappings can be added to new and existing fences, posts, gate stiles and gate posts. It can also be used for cappings and thatch for gazebos, huts and pergolas.

