


# INSTALLATION GUIDE FOR SLIDING GATE KIT


ALL DAY FENCING

## STEP 1 - EXCAVATE FOOTINGS

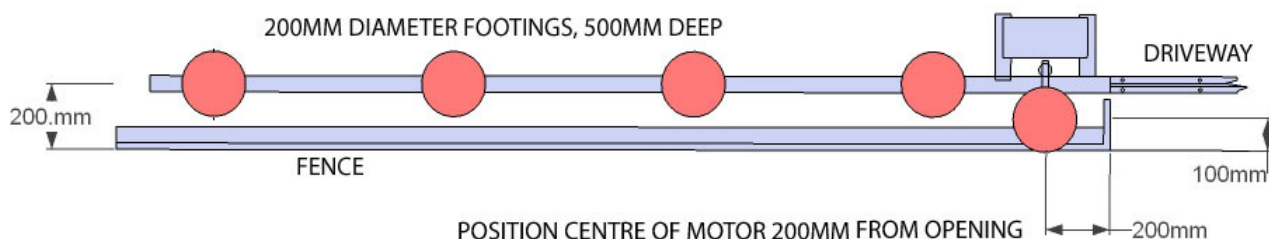

**TIP!** Stand the gate base in position, with the end flush with the driveway opening, mark the position of the footings required.


## STEP 2 - CONCRETE THE BASE

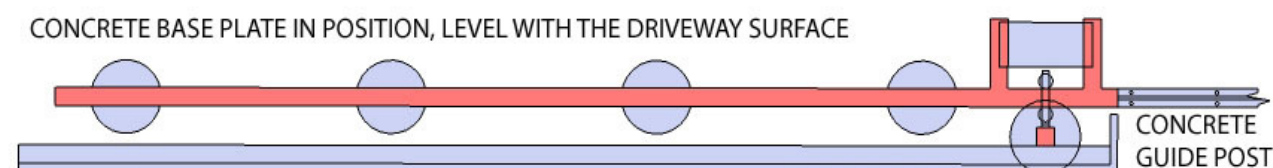


**TIP!** Support the base on blocks, check the level and all measurements before concreting. Ensure a minimum 70mm cover to the sides and bottom of the steel feet.

## STEP 3 - INSTALL TRACK AND TOP ROLLER

**TIP!** If the driveway is not quite level, you can either install the gate base on an angle to match the driveway or chisel a 60mm wide channel across the driveway using a grinder and cold chisel. Level the track with mortar mix and secure with nylon anchors.

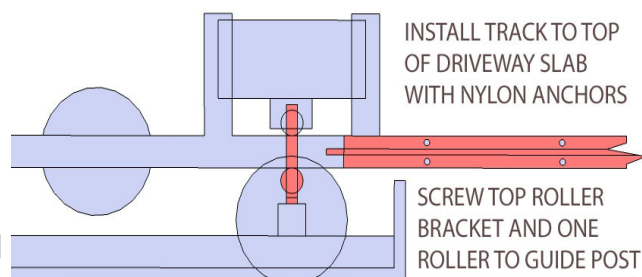


## STEP 4 - ERECT GATE FRAME

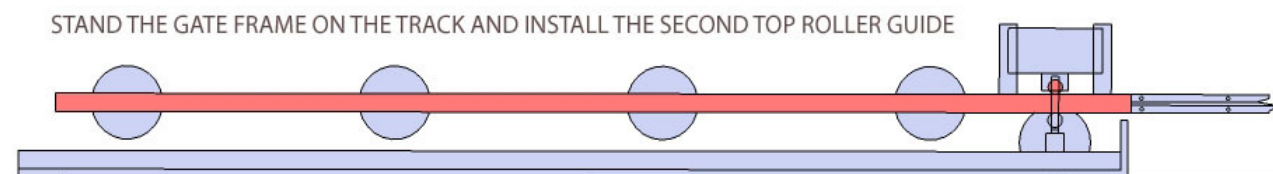

**TIP!** Finish the top of your gate with a timber cap or aluminium channel. For curved top designs an additional post and guide block can be fitted to the rear of the gate.

## STEP 5 - INSTALL MOTOR AND RACK

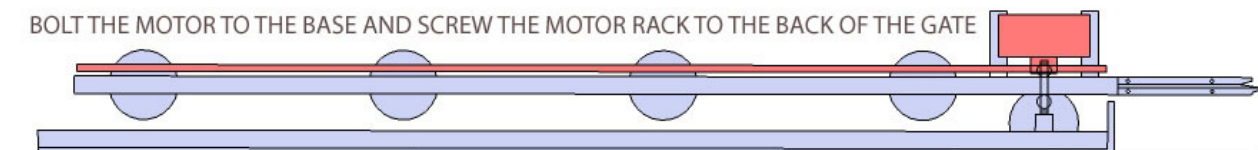

**TIP!** Slide the gate slowly closed while fixing the motor rack. Allow 1mm clearance between the motor drive wheel and the motor rack. A qualified electrician is required to connect the motor to the mains power.